


FLUSH & REVEAL - Z-GIRT SUBSTRATE DETAILS

WINDOW HEAD DETAIL


VERTICAL APPLICATION

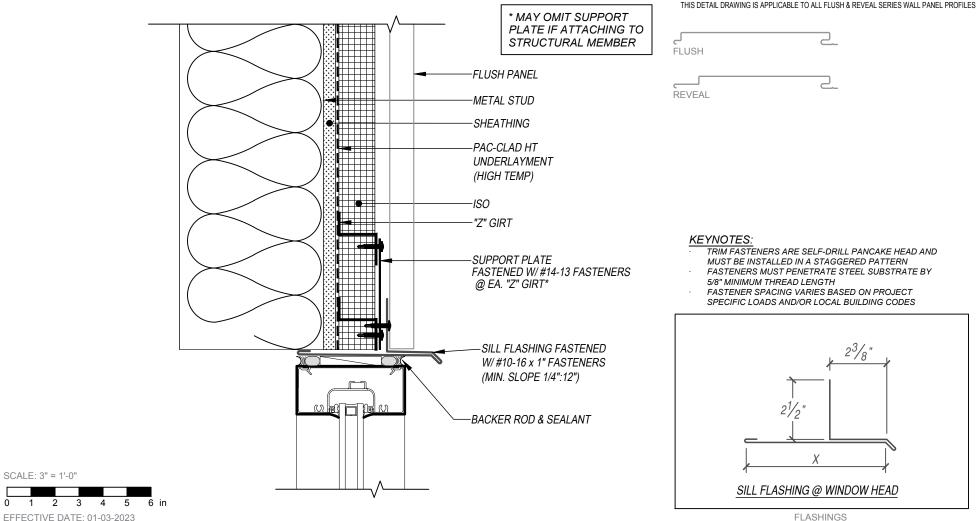



KEYNOTES:

- TRIM FASTENERS ARE SELF-DRILL PANCAKE HEAD AND MUST BE INSTALLED IN A STAGGERED PATTERN
- FASTENERS MUST PENETRATE STEEL SUBSTRATE BY 5/8" MINIMUM THREAD LENGTH
- FASTENER SPACING VARIES BASED ON PROJECT SPECIFIC LOADS AND/OR LOCAL BUILDING CODES

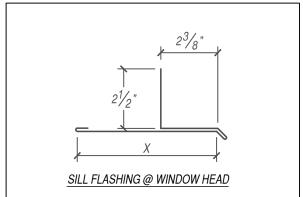

FLASHINGS

DISCLAIMER: DETAIL SHOWN FOR ILLUSTRATION PURPOSES ONLY, ACTUAL PROJECT DETAIL MAY VARY

PETERSEN ALUMINUM CORPORATION - PAC-CLAD.COM

SUBJECT TO CHANGE WITHOUT NOTICE

SCALE: 3" = 1'-0"

F: 903-581-8592

SALES@PETERSENMAIL.COM