



## **HIGHLINE SERIES - Z-GIRT**

## WALL-TO-SOFFIT DETAIL

**VERTICAL APPLICATION** 

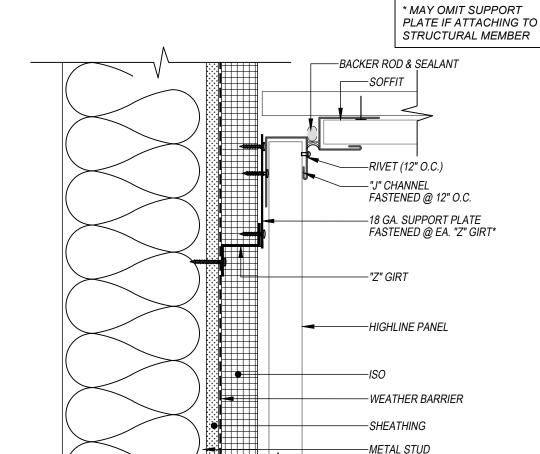




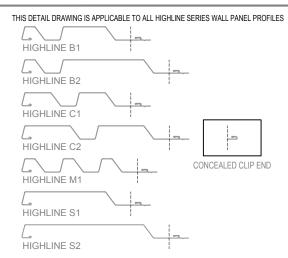

## KEYNOTES:

- TRIM FASTENERS ARE SELF-DRILL PANCAKE HEAD AND MUST BE INSTALLED IN A STAGGERED PATTERN
- FASTENERS MUST PENETRATE STEEL SUBSTRATE BY
  5/8" MINIMUM THREAD LENGTH

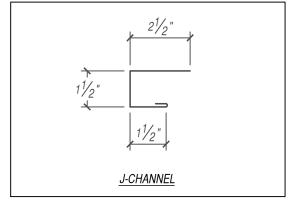

FLASHINGS

DISCLAIMER: DETAIL SHOWN FOR ILLUSTRATION PURPOSES ONLY. ACTUAL PROJECT DETAIL MAY VARY

## PETERSEN ALUMINUM CORPORATION - PAC-CLAD.COM

SCALE: 3" = 1'-0"

EFFECTIVE DATE: 01-03-2023

SUBJECT TO CHANGE WITHOUT NOTICE

SALES@PETERSENMAIL.COM