



HIGHLINE SERIES - Z-GIRT

WINDOW SILL DETAIL

VERTICAL APPLICATION

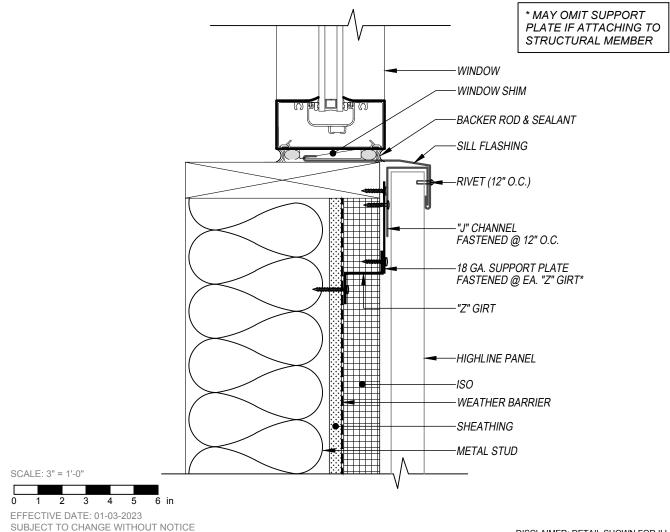




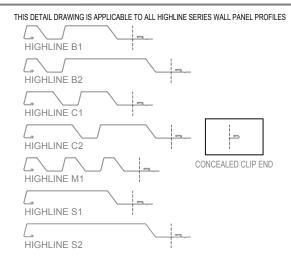

KEYNOTES:

- TRIM FASTENERS ARE SELF-DRILL PANCAKE HEAD AND
 MUST BE INSTALLED IN A STAGGERED PATTERN
 FASTENERS MUST PENETRATE STEEL SUBSTRATE BY
- FASTENERS MUST PENETRATE STEEL SUBSTRATE BY 5/8" MINIMUM THREAD LENGTH

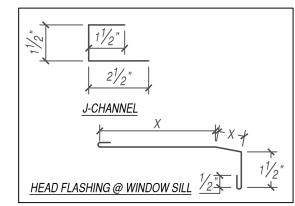

FLASHINGS

DISCLAIMER: DETAIL SHOWN FOR ILLUSTRATION PURPOSES ONLY, ACTUAL PROJECT DETAIL MAY VARY

PETERSEN ALUMINUM CORPORATION - PAC-CLAD.COM

P: 800-441-8661

F: 903-581-8592

SALES@PETERSENMAIL.COM