
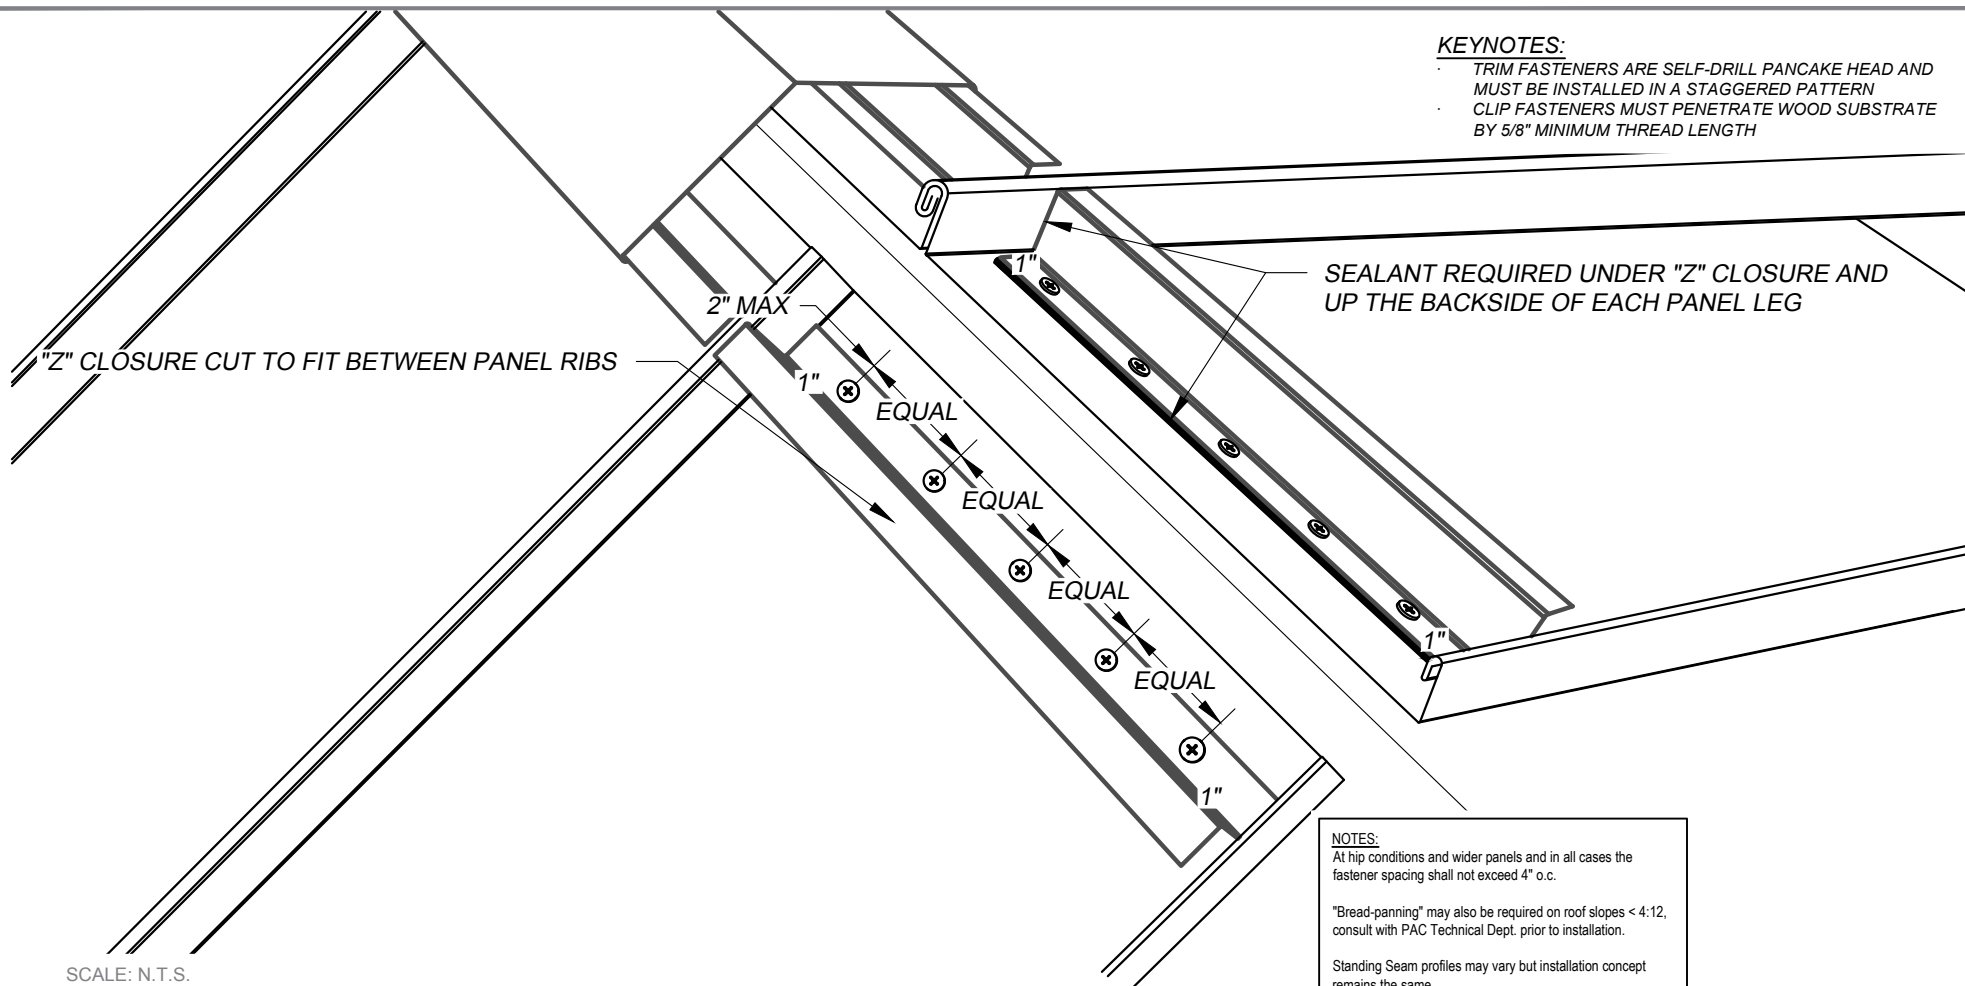


PAC 150 - WOOD SUBSTRATE DETAILS

Z-CLOSURE DETAIL

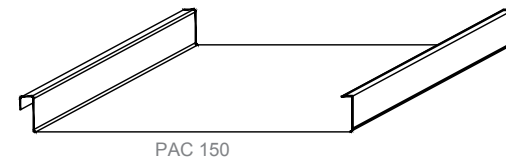


KEYNOTES:

- TRIM FASTENERS ARE SELF-DRILL PANCAKE HEAD AND MUST BE INSTALLED IN A STAGGERED PATTERN
- CLIP FASTENERS MUST PENETRATE WOOD SUBSTRATE BY 5/8" MINIMUM THREAD LENGTH

NOTES:
At hip conditions and wider panels and in all cases the fastener spacing shall not exceed 4" o.c.
"Bread-panning" may also be required on roof slopes < 4:12, consult with PAC Technical Dept. prior to installation.
Standing Seam profiles may vary but installation concept remains the same.

SCALE: N.T.S.



EFFECTIVE DATE: 01-03-2023
SUBJECT TO CHANGE WITHOUT NOTICE

DISCLAIMER: DETAIL SHOWN FOR ILLUSTRATION PURPOSES ONLY. ACTUAL PROJECT DETAIL MAY VARY