
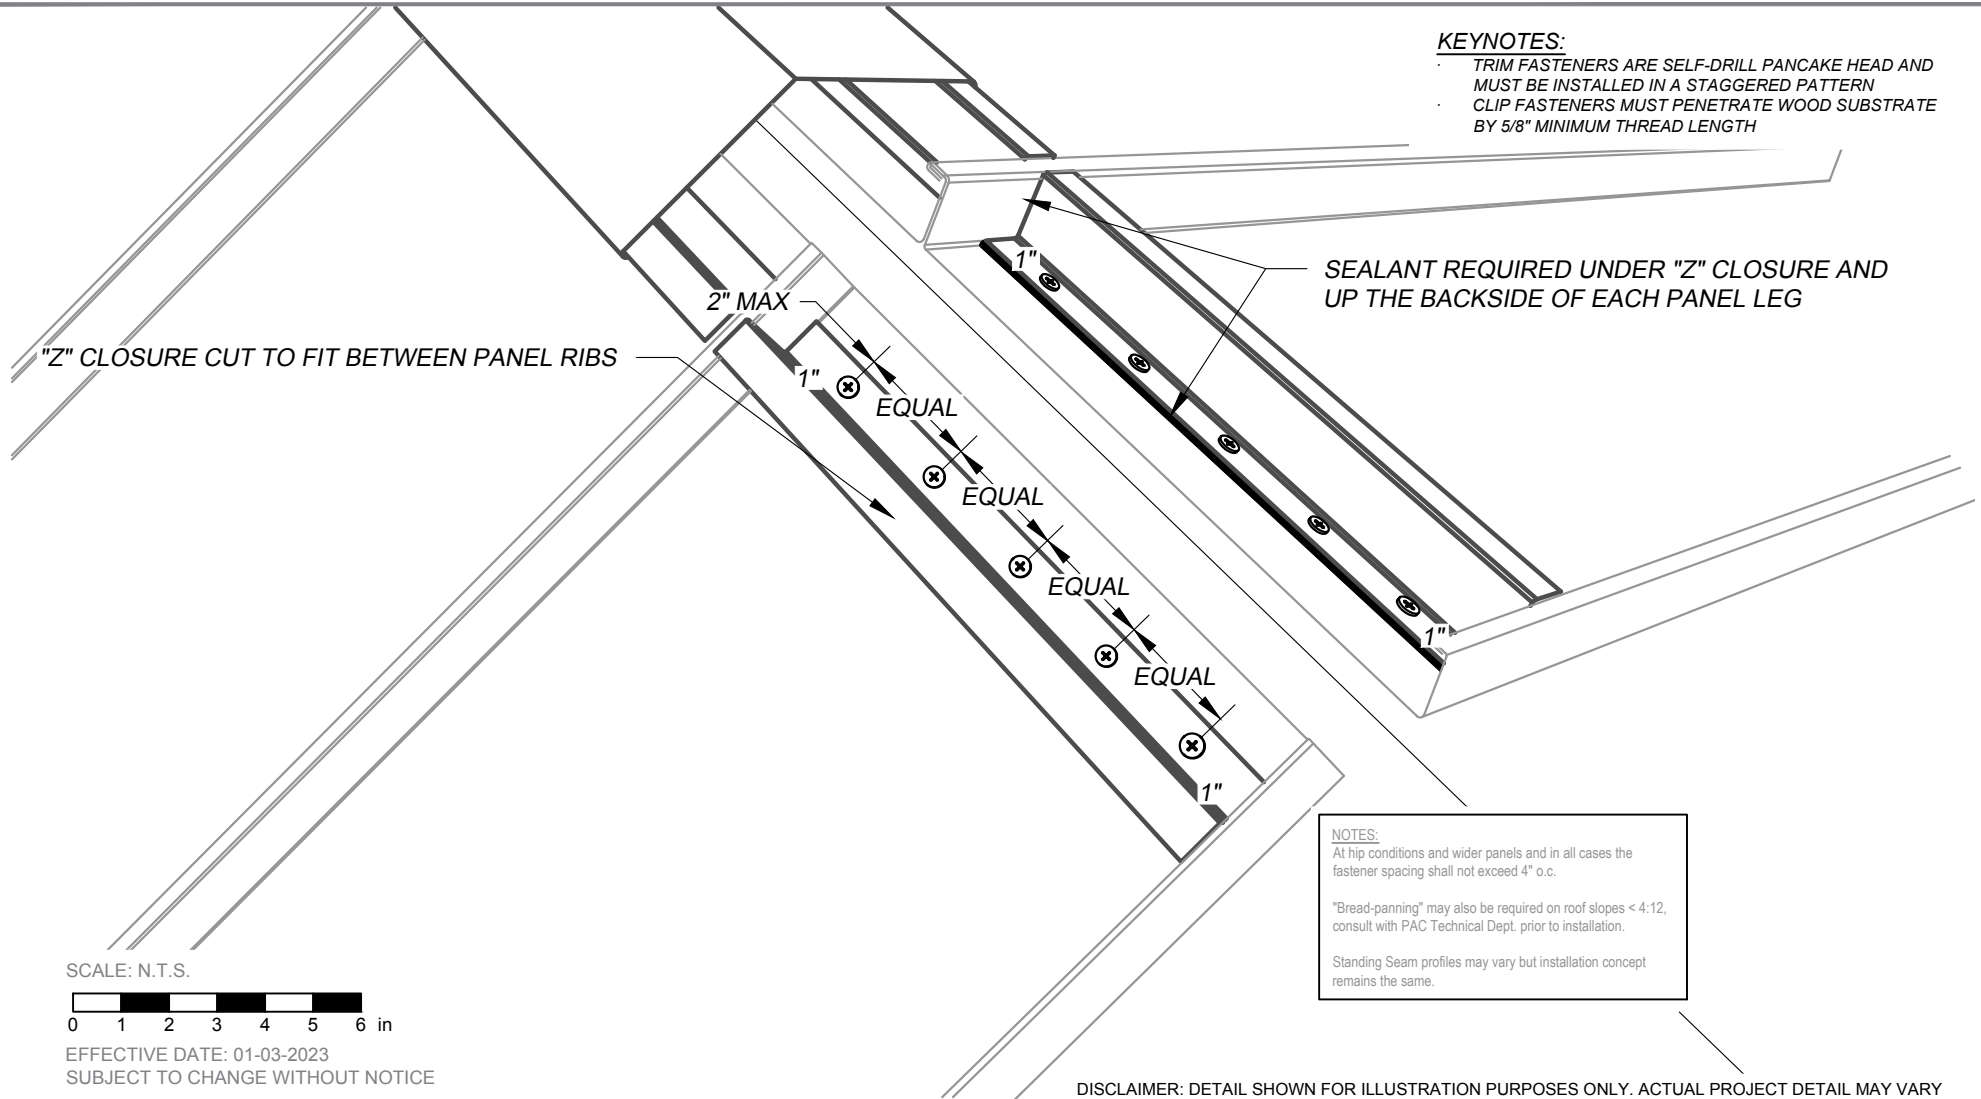


# TITE-LOC - WOOD SUBSTRATE DETAILS

## Z-CLOSURE DETAIL

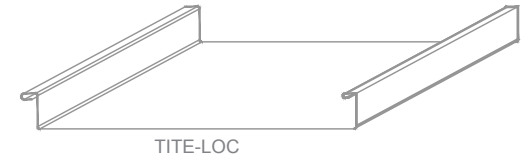

**KEYNOTES:**


- TRIM FASTENERS ARE SELF-DRILL PANCAKE HEAD AND MUST BE INSTALLED IN A STAGGERED PATTERN
- CLIP FASTENERS MUST PENETRATE WOOD SUBSTRATE BY 5/8" MINIMUM THREAD LENGTH

SEALANT REQUIRED UNDER "Z" CLOSURE AND UP THE BACKSIDE OF EACH PANEL LEG

**NOTES:**  
At hip conditions and wider panels and in all cases the fastener spacing shall not exceed 4" o.c.  
  
"Bread-panning" may also be required on roof slopes < 4:12, consult with PAC Technical Dept. prior to installation.  
  
Standing Seam profiles may vary but installation concept remains the same.

DISCLAIMER: DETAIL SHOWN FOR ILLUSTRATION PURPOSES ONLY. ACTUAL PROJECT DETAIL MAY VARY

SCALE: N.T.S.



EFFECTIVE DATE: 01-03-2023  
SUBJECT TO CHANGE WITHOUT NOTICE