




## TITE-LOC PLUS - WOOD SUBSTRATE DETAILS **SLOPE CHANGE - OPTION 2** (LOW SLOPE TO STEEP SLOPE)



## KEYNOTES:

- TRIM FASTENERS ARE SELF-TAPPING PANCAKE HEAD AND MUST BE INSTALLED IN A STAGGERED PATTERN
- CLIP FASTENERS MUST PENETRATE WOOD SUBSTRATE BY 5/8" MINIMUM THREAD LENGTH
- FASTENER SPACING VARIES BASED ON PROJECT SPECIFIC LOADS AND/OR LOCAL BUILDING CODES

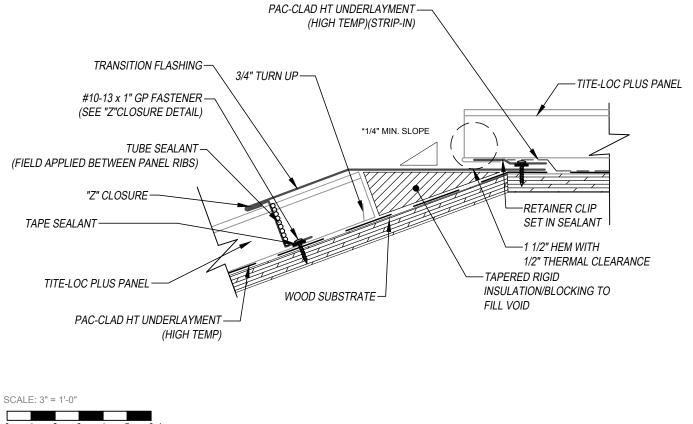

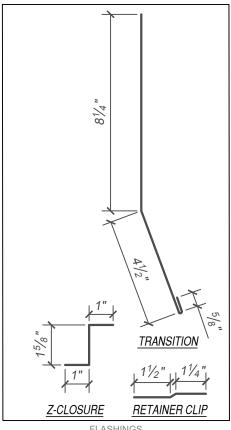

**FLASHINGS** 

DISCLAIMER: DETAIL SHOWN FOR ILLUSTRATION PURPOSES ONLY, ACTUAL PROJECT DETAIL MAY VARY

## PETERSEN ALUMINUM CORPORATION - PAC-CLAD.COM

EFFECTIVE DATE: 01-03-2023

SUBJECT TO CHANGE WITHOUT NOTICE

SALES@PETERSENMAIL.COM